

# EDEM-EconoDual™ Electrical Series

## Overview

The AgileSwitch EDEM-EconoDual Electrical driver provides monitoring and fault reporting information to enable better control and analysis of an IGBT-based power system. The EDEM provides up to 15 Amps of peak current at an operating frequency up to 30 kHz. The driver includes isolated HI and LO Side DC/DC converters, an optional 2 pin MTA thermistor connector and provides up to 7 fault conditions that can be reported separately or as a single fault via the 20 pin control header. All AgileSwitch drivers use automotive temperature grade components and allow for modifying settings of gate resistors and active clamping.

## Configurable Features


- 2-level turn-off time and voltage level
- Soft Shut Down (SSD) time and voltage level
- Desaturation time and voltage level
- Dead time
- Fault lockout settings
- Automatic Reset settings

## Key Switch Driver Features

- Master-Slave capability for parallel operation
- 2 X 2W output power
- RoHs & UL compliant
- Interface for 3.3V or 5V logic levels
- Gate drive voltage +15V/-10V
- Peak gate current +15A/-10A
- Power supply under-voltage lockout (UVLO)

## Applications

- Solar/PV Inverters
- Wind Turbines
- UPS
- HEV/EV
- Motor Drives
- High Speed Trains/Traction
- Induction Welding, Cutting and Heating
- Frequency Conversion

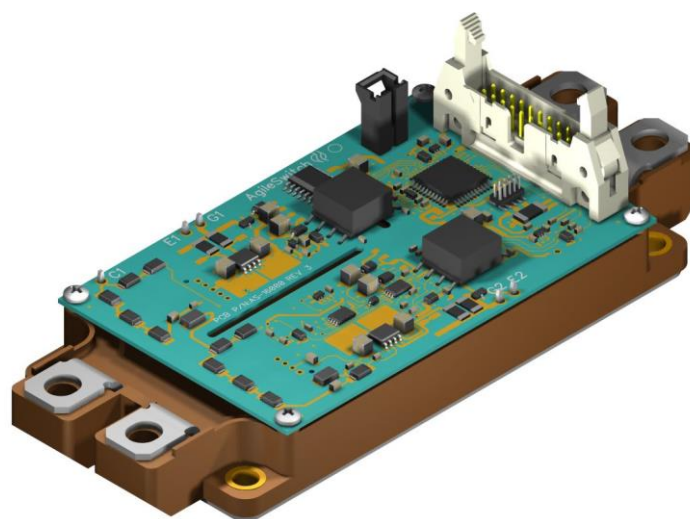

## System Overview

The basic topology of the driver is shown in Figure 1.

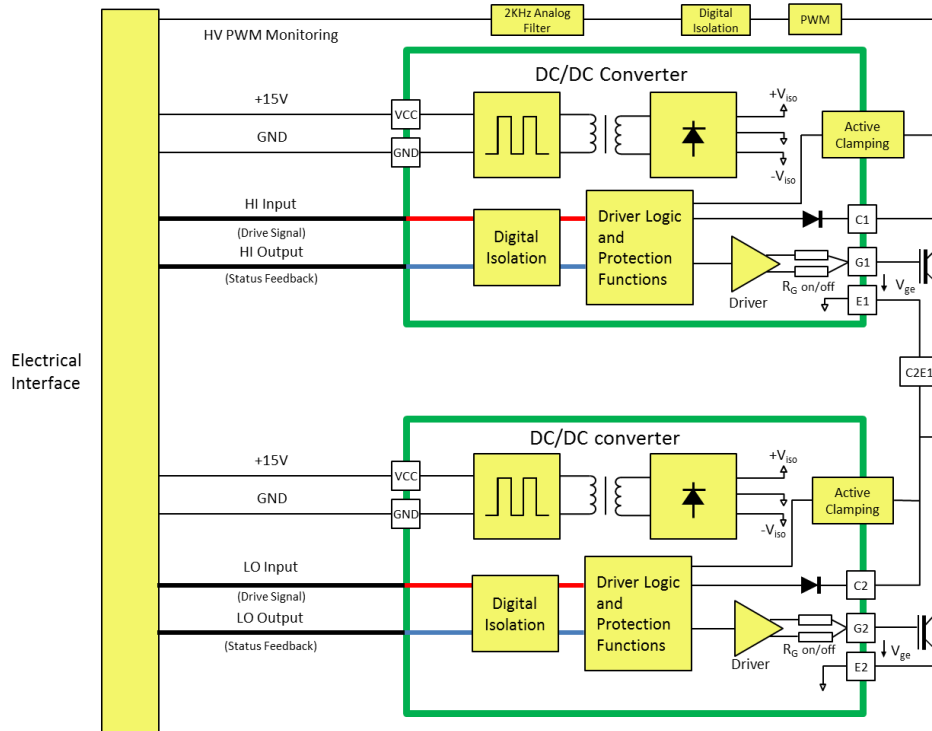


Figure 1: Basic schematic of the EDEM-EconoDual IGBT driver

## Absolute Maximum Ratings

Interaction of maximum ratings is dependent on operating conditions

Parameter	Description	Min	Max <sup>1</sup>	Unit
Supply Voltage	VCC to GND	0	18	V
Peak Gate Current	Note 1	-10	+15	A
Input Logic Levels	To GND	-0.5	5	V
Output Power per Gate			2.0	W
Switching Frequency	Note 2		30	kHz
Isolation Voltage	Primary to Secondary VAC RMS 1 min		3750	V
Working Voltage	Primary to Secondary, Secondary to Secondary		1200/1700	V
Creepage Distance	Primary to Secondary Side	8		mm
$dV/dt$	Rate of change input to output		25	kV/ $\mu$ s
Operating Temperature		-40	+85 (+100 opt)	°C
Storage Temperature		-40	+90	°C

## Electrical Characteristics

Conditions:  $V_{SUP} = +15.0\text{ V}$ ,  $V_{IN\_LOGIC} = 5\text{ V}$  or  $3.3\text{ V}$

Power Supply	Description	Min	Typ	Max	Unit
Supply Voltage	VCC to GND	14	15	16	V
Supply Current	Without Load - Note 3		100	120	mA
Average Supply Current	Note 3		350		mA
UVLO Level-HI and LO	Secondary Side low voltage detect fault level	9			V
$V_{SOFT}^*$	2-level turn-off or Soft Shut Down Voltage	9.5	10	10.5	V

Logic Signal	Description	Min	Typ	Max	Unit
Input Impedance	HI and LO side input level	4.7			k $\Omega$
$V_{IN}$ Low	Turn off threshold			0.9	V
$V_{IN}$ High	Turn on threshold	2.5			V
Gate Output Voltage Low		-9	-10	-11	V
Gate Output Voltage High		+14	+15	+16	V
Fault Output Voltage				0.5	V
Fault Output Current	Note 4		8		mA
Switching Frequency	Note 2		10	30	kHz
HV DC Link Monitoring	High Voltage Monitoring Output, description below	0		5	V

IGBT Short Protection	Description	Min	Typ	Max	Unit
Desat Monitor Voltage	Between Collector and Emitter of IGBT		7.0		V
$T_{DSAT}^*$	Activation after IGBT Turn on		6.1		$\mu\text{s}$
Response Time after Fault			500		ns

**Note 1:** Input signal should not be activated until 20 ms after power is applied to allow on board DC-DC converter to stabilize.

**Note 2:** Actual maximum switching speed is a function of gate capacitance.

**Note 3:** Supply Current with load of  $1.0\ \Omega$  and  $41\text{ nF } C_{INPUT} + 3,500\text{ nC}$  dynamic gate charge at an operating frequency of 10 kHz.

**Note 4:** Fault lines are open collector and require a pull-up resistor.

**Note 5:** This timing is when the dead time overlap is set to zero.

\* Configurable

**High Voltage DC Link Monitoring:** The AgileSwitch EconoDual Driver provides an isolated 5V analog output that monitors the High Voltage (collector C1 to emitter E2) across the IGBT half bridge. The signal has an output impedance of 3 k $\Omega$ . It can be safely connected to ground if not used. The bandwidth of the HV monitor is 2 kHz. It is recommended to add one or two active pole filters on the host interface board to filter out any noise that might be introduced through the ribbon cable interface. The HV monitor is accurate to 1% from 150V to 900V at 50 °C ambient. Over the entire temperature range the accuracy is 2%. To determine the actual High Voltage from the Monitor signal use the following equation:

$$HV_{ACTUAL} = (203 \times HV_{SIGNAL}) + 3V$$

## Interconnects

### Controller/Power to Driver Connectors

Connector	Type	Manufacturer Part Number
Mating Ribbon Cable	20 Pins	FCI 71600-120LF
Driver Board	20 Pins	FCI 71918-220LF

### Master to Slave Driver Connectors (Optional - Please specify if required, otherwise not populated)

Connector	Type	Manufacturer Part Number
Driver Board	5 Pin	TE 5-104363-4
Cable Assembly	5 Pin	TE 104257-4
Driver Board	4 Pin	TE 5-104363-3
Cable Assembly	4 Pin	TE 104257-3

### PINOUT

Pin No	Signal	Pin No	Signal
1	Spare	2	Spare
3	Spare	4	Spare
5	VCC – +15V Supply Voltage	6	GND
7	VCC – +15V Supply Voltage	8	GND
9	HI-F – HI-Fault	10	GND
11	HI-D – HI Drive In	12	GND
13	LO-F – LO-Fault	14	GND
15	LO-D – LO Drive In	16	GND
17	AL-F – All Faults (Low when HI-F or LO-F if low)	18	HV-O – HV Output with 3 kΩ impedance or GND
19	F-RS – Fault Reset (Auto Reset Optional)	20	GND

### Recommended Interface Circuitry

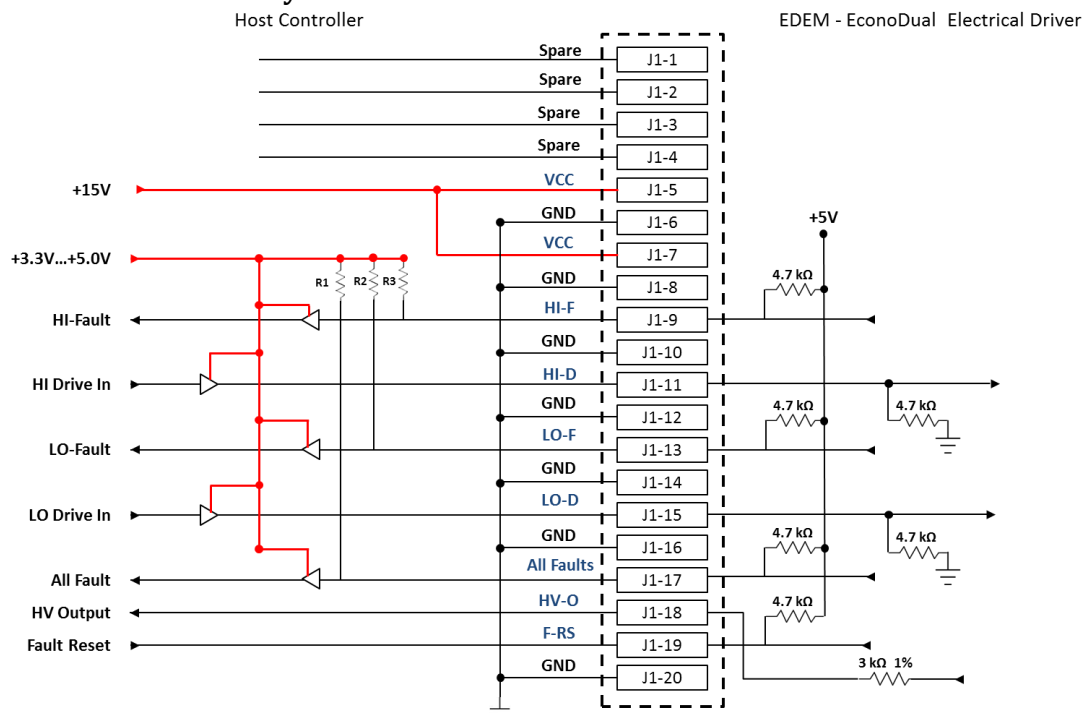


Figure 2: EDEM-EconoDual IGBT driver Pin Connector

## Timing Diagrams

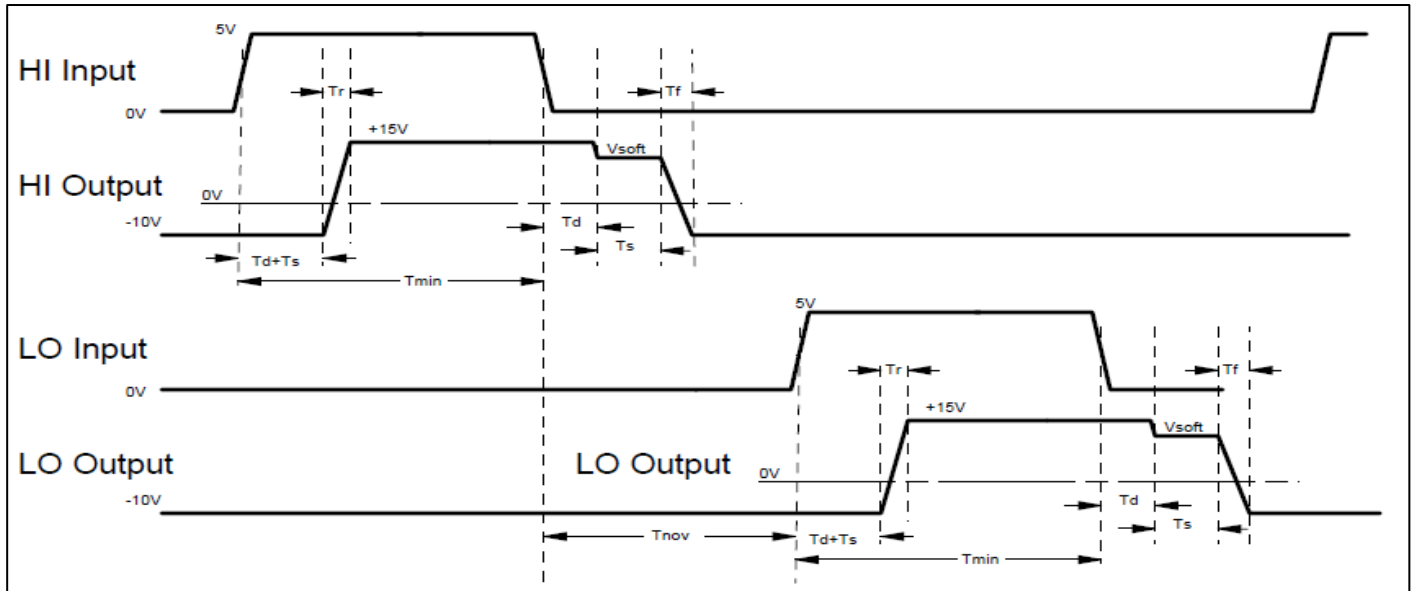


Figure 3: Signal input and output timing diagram.

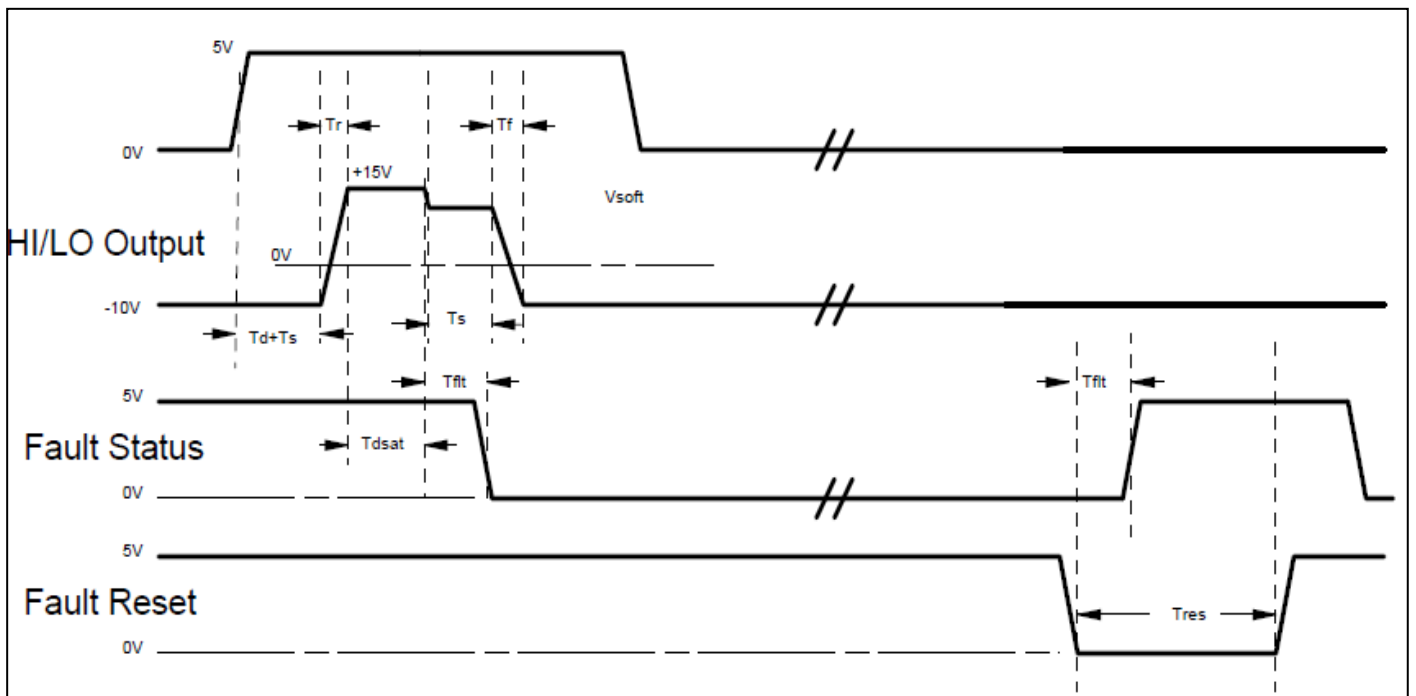


Figure 4: Signal desaturation and fault timing diagram.

### Timing Diagram Values

Conditions:  $V_{SUP} = +15.0$ , Temp = 0 °C to 85 °C

Description	Symbol	Min	Typ	Max	Units	Notes
Minimum Pulse Width	$T_{MIN}$	1000			ns	
Delay Time	$T_D$			250	ns	
Rise Time	$T_R$		100	200	ns	Measured from 10% to 90% points on edge, Measurement Point 1
Fall Time	$T_F$		150	250	ns	Measured from 10% to 90% points on edge, Measurement Point 2
Soft Turn Off Time	$T_S$	750	850	950	ns	
Desaturation Time	$T_{DSAT}$	5800	6100	6400	ns	Configurable
Fault Time Delay	$T_{FLT}$	250	300	500	ns	
Dead Time	$T_{NOV}$		2500		ns	Recommended Time between Inputs
Reset Timing	$T_{RES}$	500			ns	
Automatic Reset (Optional)			5		ms	Standard setting of 5 ms. Configurable from 100 $\mu$ s to 10 ms.

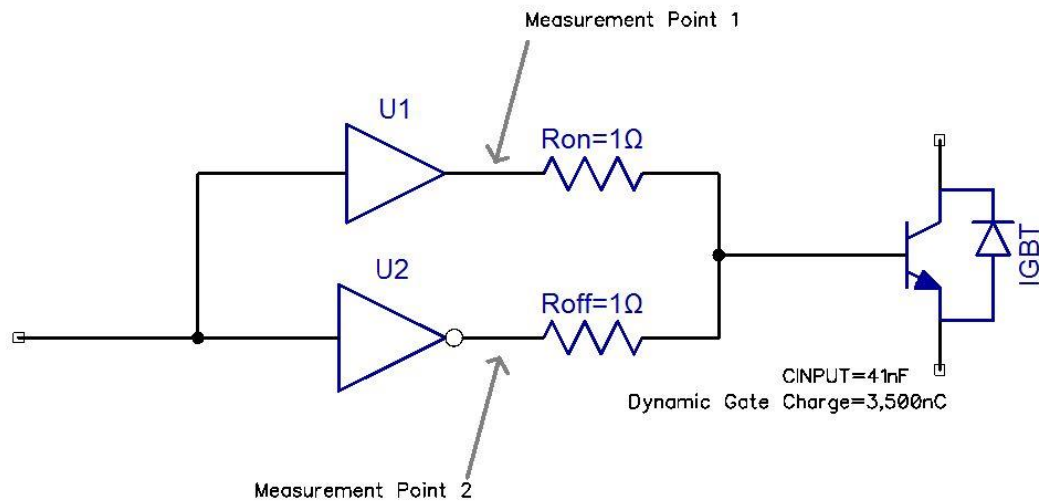


Figure 5: Measurement points for rise and fall time.  $C_{INPUT}$  and Dynamic gate charge are from Fuji 2MBI450VN-120-50 IGBT.

## Generic Sample Factory Settings

1. The dead time is set to 2.5  $\mu\text{s}$  and in most applications this amount of "off" time between the HI-Side and LO-Side IGBTs switching is sufficient to prevent shoot-through from occurring. It is important to determine this requirement for each specific application. If your application requires a change to dead time, please contact [AgileSwitch](#).
2. The default Gate resistors for the driver is 1.5  $\Omega$  ( $R_{g_{ON}}$ ) and 2.7  $\Omega$  ( $R_{g_{OFF}}$ ). This is a safe range for all supported IGBTs. For optimum performance, these resistors may be changed from 0.5  $\Omega$  up to 5.0  $\Omega$ .
3. Desaturation ( $T_{DSAT}$ ) monitoring is set for 6.1  $\mu\text{s}$ . This can be adjusted from 1 through 9  $\mu\text{s}$ . After 6.1  $\mu\text{s}$  if the voltage across the IGBT is greater than 7V, a desaturation fault is detected and the IGBT is turned off and a fault signal is output. Please contact [AgileSwitch](#) to change the desaturation monitor time and voltage.
4. All faults are reset by the controller by pulling pin 19 low. Pin 19 must be high for normal operation. It is recommended to use a 4.7k $\Omega$  pull-up resistor. If the Auto Reset option is selected, pin 19 can be a no connection (NC).
5. The NTC measurement is sent to a two pin connector.
6. The IGBT High Side Collector voltage is monitored through an optional analog voltage on pin 18 of the 20 pin driver board connector.
7. If Auto Reset is not selected, the Fault Reset signal, pin 19, must go low to clear all fault signals. Since the fault signals are latched, the state of the latches cannot be guaranteed on power up and it is recommended that the Fault Reset signal be pulled low for at least 500 ns at start up after the power supplies have stabilized.

## Generic Sample Factory Settings – Fault and Monitoring Conditions

AgileSwitch drivers are designed to provide safe, secure and efficient operation of the IGBT as well as to provide unparalleled information on the condition of the overall system.

Generic samples are set at the factory to perform certain actions (e.g. turn off the HI side or LO side of the IGBT) and to report that a fault occurred based on IGBT performance parameters that occur outside of default ranges. Certain parameters are configurable. Please contact AgileSwitch for details.

**All Faults:** Any fault condition activates the All Faults line. Based on this occurrence, the controller can interrogate the Spare lines, as well as the HI/LO Fault lines, for the appropriate Fault Condition Code.

**Lockout:** The generic sample driver is configured to enable a lockout (requiring a reset from the controller). This can be changed to either report the fault without turning off the IGBT or automatically reset after 5 ms.

Fault Condition/Action	Generic Sample Default Trigger Values	Action on IGBT if Active	Output to Controller (if active)	Lock out
UVLO – HI	See Electrical Characteristics	Turn Off HI & LO Side	HI Fault	Yes <sup>1</sup>
UVLO - LO	See Electrical Characteristics	Turn Off HI & LO Side	LO Fault	Yes <sup>1</sup>
Desat - HI	See Electrical Characteristics	Turn Off HI & LO Side	HI Fault	Yes <sup>1</sup>
Desat – LO	See Electrical Characteristics	Turn Off HI & LO Side	LO Fault	Yes <sup>1</sup>
Active Clamping – HI	Optional – values if active: 950V <sup>1</sup> (1200V IGBT) 1350V <sup>1</sup> (1700V IGBT)	Active Clamping occurs	None	No
Active Clamping – LO	Optional – values if active: 950V <sup>1</sup> (1200V IGBT) 1350V <sup>1</sup> (1700V IGBT)	Active Clamping occurs	None	No
Cross Latch/Shoot Through	Attempt to turn on both IGBTs simultaneously	Does not allow turn on of inactive IGBT until active is off for 2.5 $\mu$ s <sup>1</sup> If Both IGBTs are on, turn off HI & LO Side	HI & LO Faults	Yes <sup>1</sup>

<sup>1</sup> Configurable parameter



## Important Precautions



**Caution: Handling devices with high voltages involves risk to life. It is imperative to comply with all respective precautions and safety regulations.**

**When installing the ribbon cable, please make sure that power is turned off. Multi-signal values are sent along this ribbon cable, thus hot swapping may cause damage to the IC components on the board.**

**AgileSwitch assumes that the gate drive board has been mounted on the IGBT prior to start-up testing. It is recommended that the user checks that the IGBT modules are operating inside the Specified Operating Area (SOA) as specified by the IGBT manufacturer including short circuit testing under very low load conditions.**

## Recommended Start-Up Testing

1. Connect the Driver through the 20 pin control header to your drive electronics and supply the driver with +15V.
2. Send the fault reset pin, pin 19, a low signal. Return pin 19 to a high condition. (If Auto Reset is selected, you may ignore this step.)
3. Check the gate voltage:
  - a. For the off-state, the nominal gate voltage should be -9V to -12V.
  - b. For the on state, it is +14 to +16V.
  - c. Check that the supply current of the driver is within spec with inactive trigger signals and then at the desired switching frequency.
4. The system is now ready for application testing under load conditions.
5. Check Thermal Conditions to verify that the system is operating within specified temperature range.

## Mechanical Dimensions

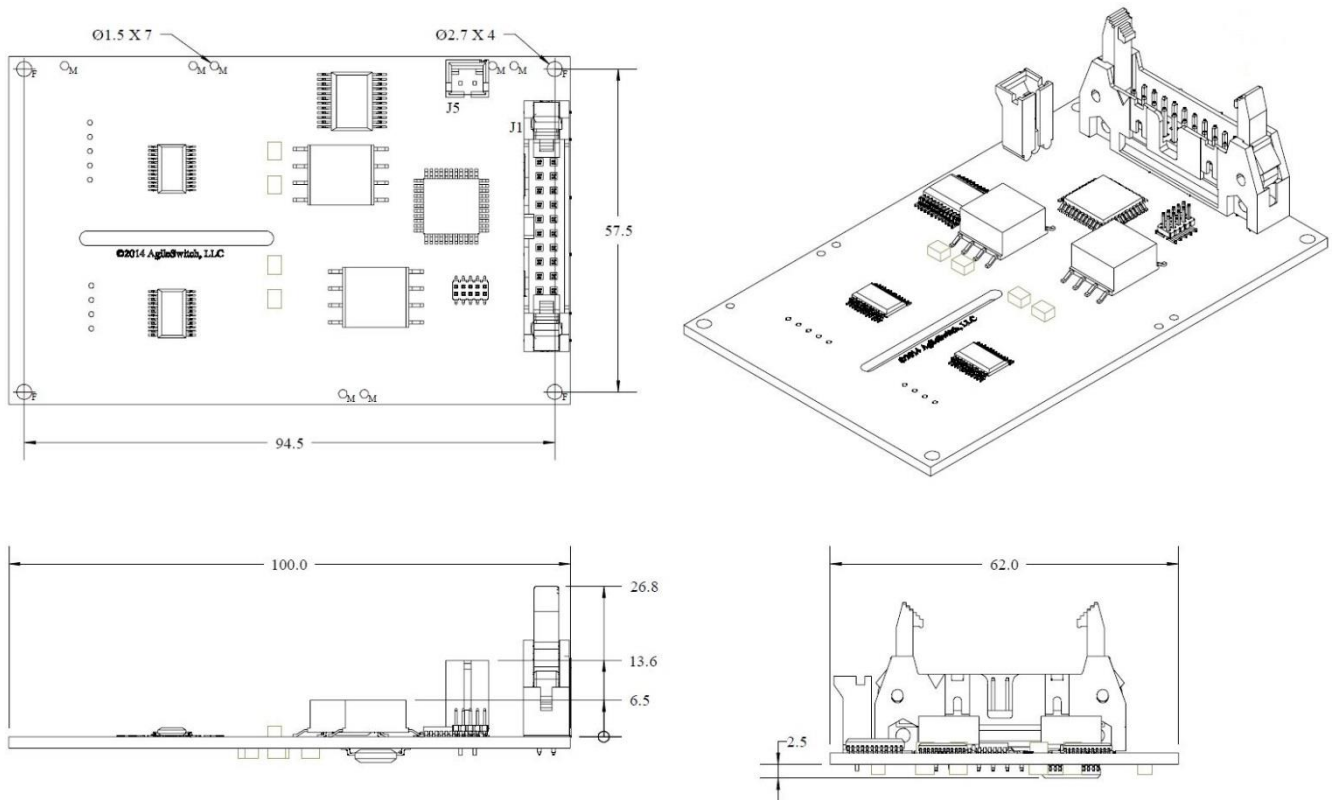


Figure 6: Dimensions of the EDEM-EconoDual Electrical Series IGBT driver (+/- 0.1mm)

Dimensions are in mm.

Download the full drawing and model for additional details. Not all components are shown.

[EDEM Drawing](#)

[EDEM .STEP Model](#)

## Revisions

Prepared By	Approved By	Version	Date	Description
A. Fender	A. Charpentier	20	5/13/2015	PCB Rev 3

## Legal Disclaimer

Information in this document is provided solely in connection with AGILESWITCH products. AGILESWITCH, LLC and its subsidiaries (“AGILESWITCH”) reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All AGILESWITCH products are sold pursuant to AGILESWITCH’s [terms and conditions of sale](#).

Purchasers are solely responsible for the choice, selection and use of AGILESWITCH products and services described herein, and AGILESWITCH assumes no liability whatsoever relating to the choice, selection or use of the AGILESWITCH products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by AGILESWITCH for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN AGILESWITCH’S TERMS AND CONDITIONS OF SALE AGILESWITCH DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF AGILESWITCH PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED AGILESWITCH REPRESENTATIVE, AGILESWITCH PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE.

AGILESWITCH PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER’S OWN RISK.

Resale of AGILESWITCH products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by AGILESWITCH for the AGILESWITCH product or service described herein and shall not create or extend in any manner whatsoever, any liability of AGILESWITCH.

AGILESWITCH, the AGILESWITCH logo, AgileStack, AgileStack Communications and Stack Black Box are trademarks or registered trademarks of AGILESWITCH, LLC in various countries. Any other names are the property of their respective owners.

Information in this document supersedes and replaces all information previously supplied.

Specifications are subject to change without notice.

© 2010-2015 AGILESWITCH LLC - All rights reserved [www.AgileSwitch.com](http://www.AgileSwitch.com).

## Patent Notices

Offering	Issued U.S. Patent Numbers
AgileStack™ Power Stack	8,984,197

## Manufacturer

AgileSwitch, LLC	Tel: +1-484-483-3256 (US)
1650 Arch Street, #1905	+44 (0)1273 252994 (Europe)
Philadelphia, PA 19103	+86 (10) 60539835 (China)
United States	Email: <a href="mailto:info@AgileSwitch.com">info@AgileSwitch.com</a>
	Web: <a href="http://www.AgileSwitch.com">www.AgileSwitch.com</a>